


HERONLUX INSTALLATION GUIDE

READ THE INSTRUCTIONS CAREFULLY BEFORE STARTING

INSIDE THE BOX

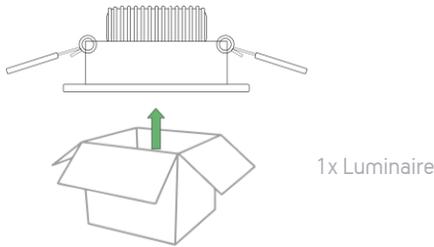


NEEDED FOR MOUNTING



WARNING

- Turn power off before inspection, installation or removal.
 - Make sure that all electrical connections are made correctly before operating the device.
 - Installation and start up should only be done by qualified personnel.
 - Cable and luminaire components must be protected against mechanical impacts and damage.
 - Do not operate luminaire with damaged parts.
 - For indoor use only.
 - Dry location only.
 - To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects.
 - The manufacturer shall not be liable for any damage resulting from inappropriate modifications to the luminaire or faulty installation.
- If you have any questions, contact the manufacturer.*

INSTALLATION


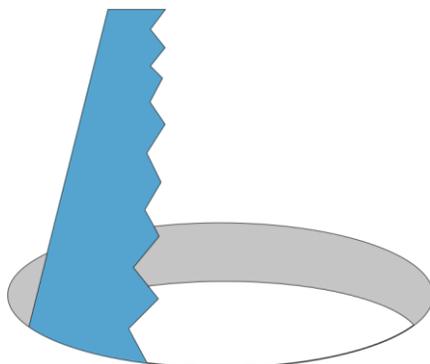


1 Cut the right size hole.


Model	 Cut hole mm
R3	80 mm
R4	115 mm
R5	155 mm
R6	160 mm
R8	210 mm

HERONLUX INSTALLATION GUIDE


5 YEARS WARRANTY

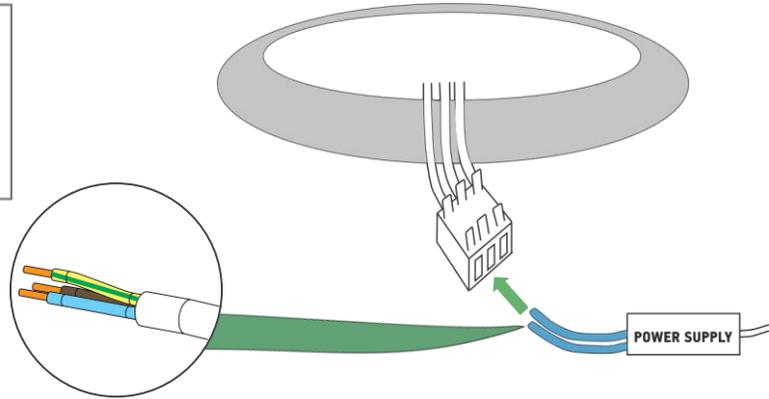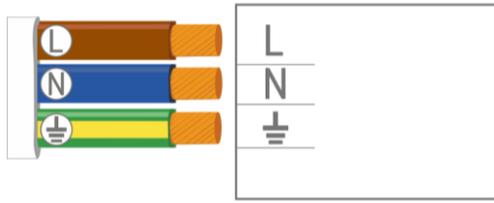

2 Strip the wires and connect them with the power supply.

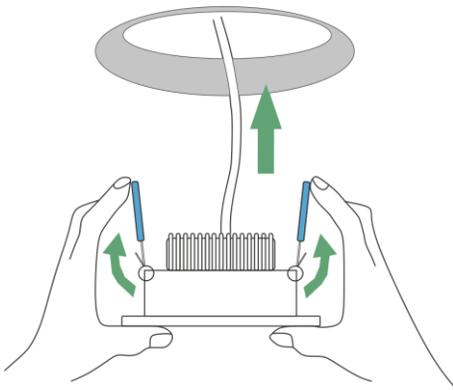

3 Push up the two lugs on the Heronlux and then push the light up into the hole.

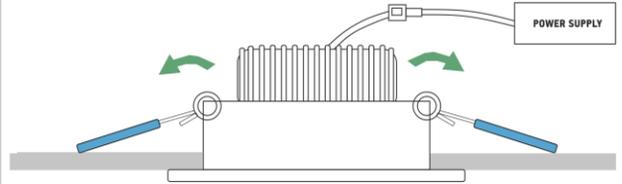

4 Once LED downlight is in the hole the lugs will come down and light will be secured