

5  
YEARS  
WARRANTY

IP 68

05

CE

RoHS  
CompliantUK  
CA


I

# SIGNBRIDGE 100 W LED DRIVER


## INSTALLATION GUIDE FOR MODEL: BPSP-100-12V.

### READ THE INSTRUCTIONS CAREFULLY BEFORE MOUNTING

- Power supply operating temperature is from -40 to +55 °C. To ensure adequate ventilation, mounting power supplies without a secondary enclosure is recommended.
- Space power supplies by standard knockout locations 19 mm minimum. If two or more power supplies are used, spacing must be at least 25 mm end-to-end, and 102 mm on each side. Power supply spacing to thermoplastic, wood, fibre, or other combustible enclosure materials must be 25 mm.
- Ensure power supplies are not overloaded by verifying output current is less than 8.33 DC amps. For best performance recommending up to 6.64 DC amps.
- Use of photocells or timing device is recommended to ensure power supplies are off during day light hours, when sign illumination is not needed. Higher daytime temperatures and unnecessary operation may shorten power supply lifetime.

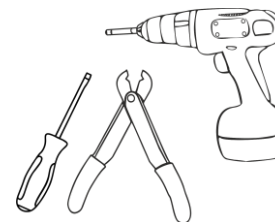

**Tools required.** Wire strippers, drill, screwdriver.

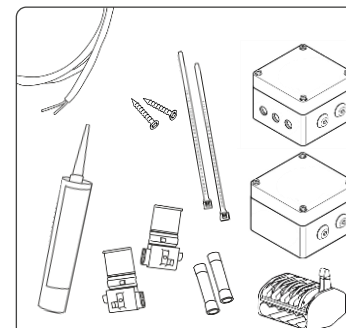

**Supplies required.** Junction box, ST 4.2 or ST 4.8 pan head screws, cable, electrical wire connectors, silicone.

